
## AG901











Build your furniture on a soft clean cover to stop components from getting marked during assembly.



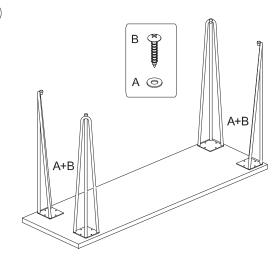

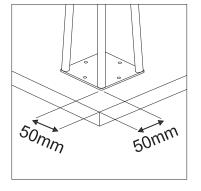




(A)


0

x16 B

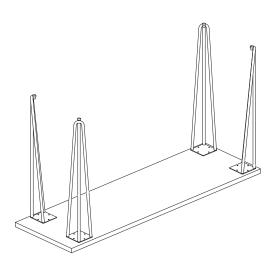

x16

(x)

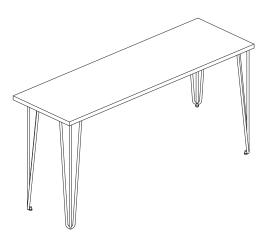

Lift furniture, do not drag across floor.